




SPARE PARTS & DISASSEMBLY RESERVDELAR & DEMONTERING

YNGVE



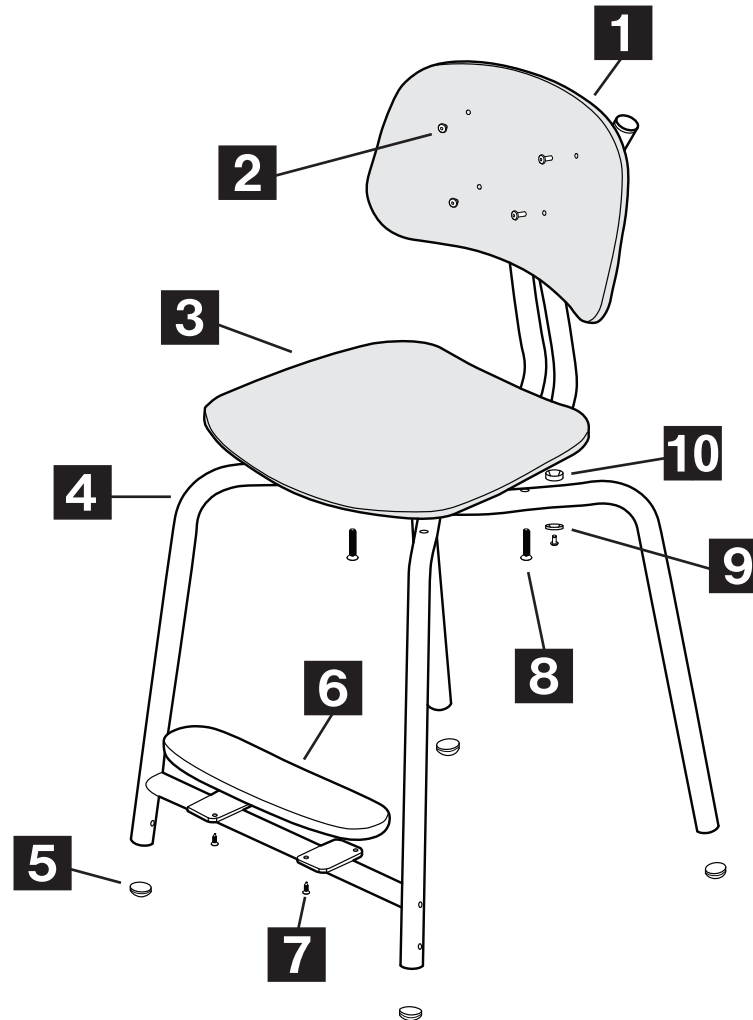

SPARE PARTS & DISASSEMBLY RESERVDELAR & DEMONTERING

YNGVE

Part No.	Description	Beskrivning	Material	Material	Article No.
1	Backrest (size 4-5)	Ryggstöd (storlek 4-5)	Wood	Trä	3630016
2	Rivet	Popnit	Metal	Metall	-
3	Seat (seat height 500mm size 4-5)	Sits (sitthöjd 500mm storlek 4-5)	Wood	Trä	3630046
4	Frame	Ram	Metal	Metall	-
5	Floor protection	Golvskydd	Plastic	Plast	-
6	Foot rest	Fotstöd	Wood	Trä	-
7	Self tapping screw	Träskruv	Metal	Metall	-
8	Allen screw M8x35	Insexskruv M8x35	Metal	Metall	-
9	Rubber cap	Gummikudde	Rubber	Gummi	62861
10	Plastic distance	Plastdistans	Plastic	Plast	62861



REPAIR

Carefully remove the broken part and install the new one in place using appropriate tools and fittings according to the assembly and disassembly instructions. Contact AJ Products for spare parts.

RECYCLING

To disassemble the furniture for proper recycling, start by removing all screws and fasteners. Then, separate the materials, such as wood, metal, and fabric, and take them to the appropriate recycling facility.



REPARATION

Ta bort den trasiga delen och montera den nya på plats med lämpliga verktyg och beslag enligt monterings- och demonteringsanvisningarna. Kontakta AJ Produkter för eventuella reservdelar.

ÅTERVINNING

För att demontera möbeln för återvinning, börja med att ta bort alla skruvar och fästanordningar. Separera sedan materialen, såsom trä, metall och tyg, och lämna dem på respektive återvinningsanläggning.



This diagram illustrates the assembly of the backrest. The main view shows the backrest being positioned behind the seat. Arrows indicate the placement of screws and washers to secure the backrest to the seat frame. Callouts provide detailed views of the backrest attachment points and the seat frame structure.