
# JUPITER TS02 RTS PST01-CPT



# ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

## Before beginning the assembly, please check that all parts are enclosed.

#### PART LIST

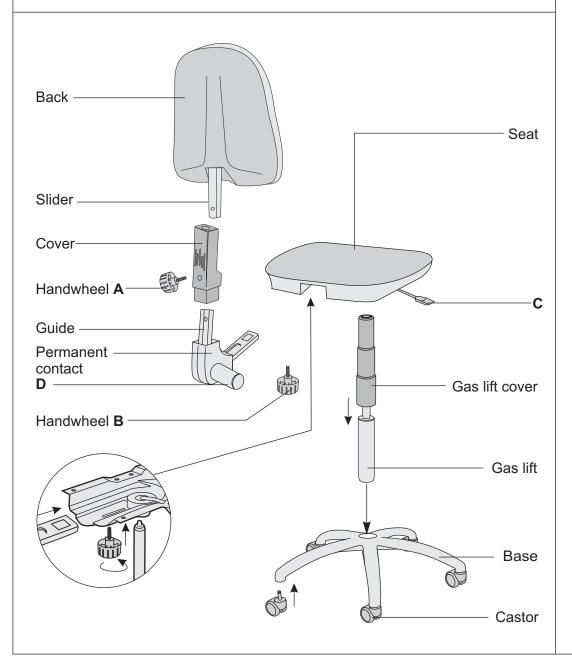

NJGB5

1 base
5 castors
1 gas lift
1 gas lift cover
1 seat

- 1 permanent contact
   1 guide cover
   1 back with slider
- 1 handwheel **A** (short)
- □ 1 handwheel **B** (long)

### ASSEMBLY

- Press wheels onto chair base. NOTE: H type wheels – onto soft base W type wheels – onto hard base
- 2. Pull gas lift cover over the gas lift.
- 3. Insert the gas lift into base.
- 4. Firmly locate the tapered end of the gas lift into locating hole in the seat base.
- 5. Connect permanent contact device to the seat and tighten handwheel **B**. Slide the cover over the guide.
- 6. Insert the back slider in the guide and tighten handwheel **A**.

### ADJUSTMENT

The seat hight adjustment - lever C.
Gas lift allows the adjustment of the seat hight.
The back height adjustment - handwheel A.
By releasing handwheel A the back can be moved up and down.

Place the back at desired position and retighten handwheel A.

• The back depth adjustment - handwheel B.

By releasing handwheel  ${\ensuremath{\textbf{B}}}$  the back can be moved forward and back.

Place the back at desired depth and retighten handwheel **B**.

• The back tilt adjustment - knob **D**.

#### MAINTENANCE

**Inspection** Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.

**Vinyl upholstery** Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

**Fabric upholstery** Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions. **Other surfaces** Wipe with a soft cloth, moistened in

a mild detergent solution. Dry and buff lightly with a dry cloth.

## Attention

Exchange and installattion of gas-lifts should only be carried out by trained specialists.