


ASSEMBLY INSTRUCTIONS - SERVING TROLLEYS (FLATPACK)




STEP 1:

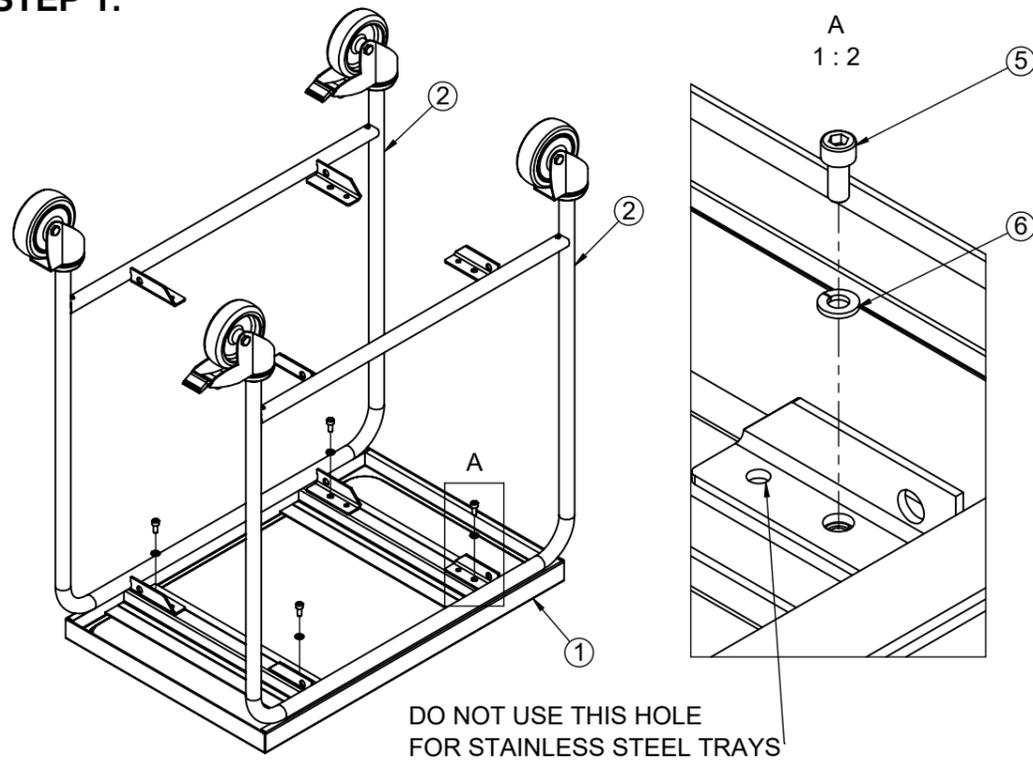


PUT ONE OF THE TRAYS UPSIDE DOWN ON A SOFT SURFACE AND PLACE THE FRAMES AS SHOWN IN THE PICTURE ABOVE. USE THE INCLUDED M6 HEX-KEY TO FASTEN THEM WITH SPRING WASHERS AND M6-SCREWS.

STEP 2:

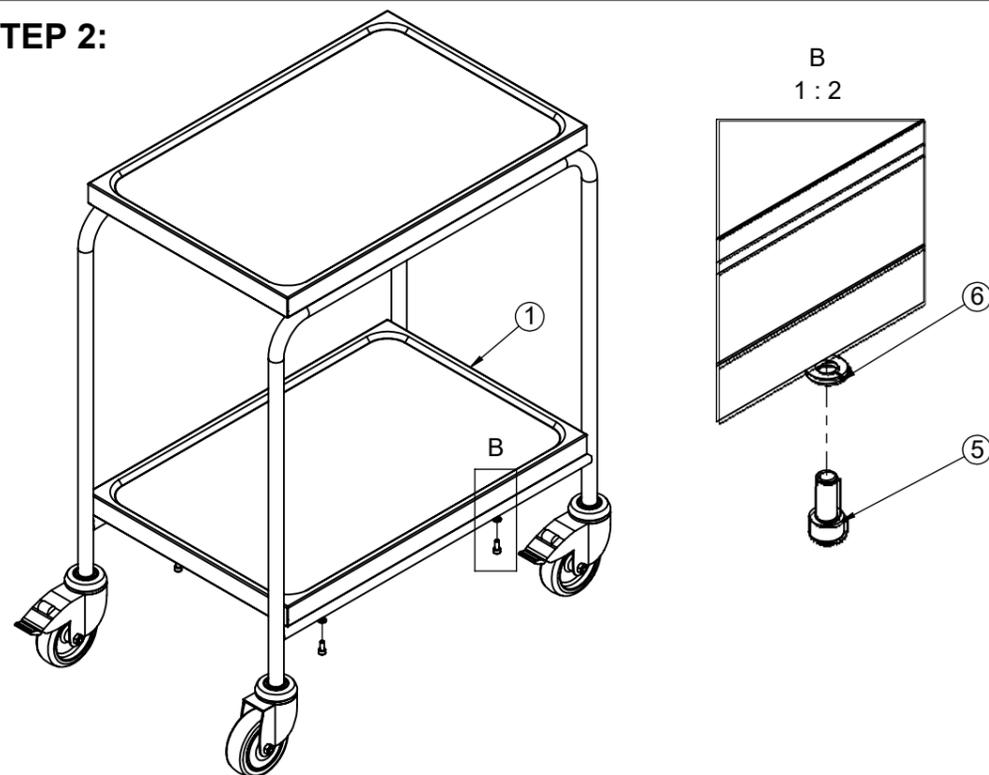

REPEAT STEP 2 FOR THE MIDDLE TRAY IF THE TROLLEY IS A 3H.

STEP 3 (OPTION):

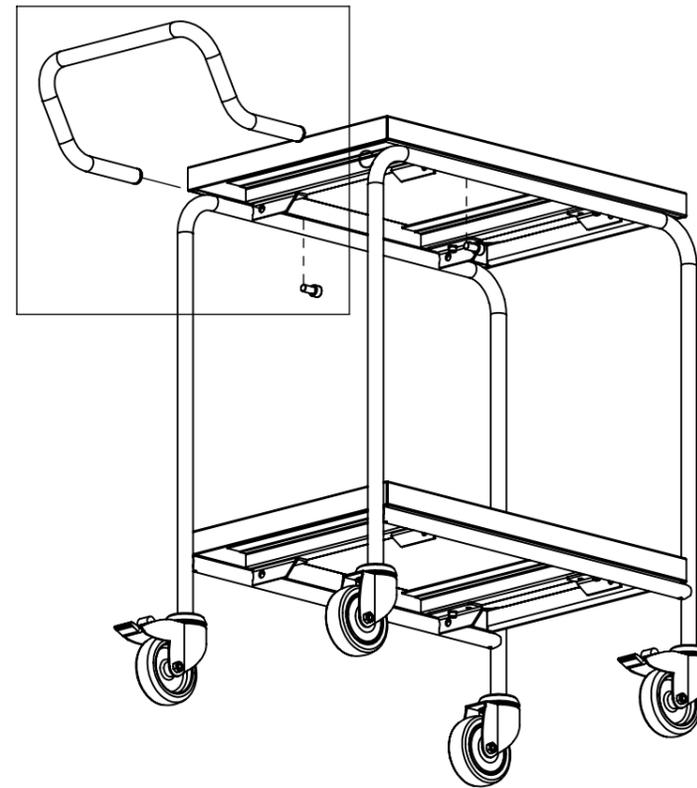

USE THE INCLUDED M10 HEX-KEY TO FASTEN THE HANDLE WITH M10-SCREWS.

Pos	Qty 2H	Qty 3H	Name
1	2	3	TRAY
2	2	2	FRAME LEFT/RIGHT
3	1	1	HANDLE
4	2	2	SCREW M10x20
5	8	12	SCREW M6x14
6	8	12	SPRING WASHER Ø6

INCLUDED TOOLS FOR ASSEMBLY:
HEX-KEYS (M6 AND M10)

